





Part n°:P10

FITTING INSTRUCTION

Take off air filter housing (diagram A).
Take off air flow meter from air filter housing.
Put clevis on the air flowmeter (diagram B).
Put direct induction kit with the attaching lug on the air flow meter

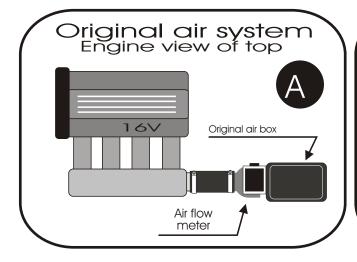

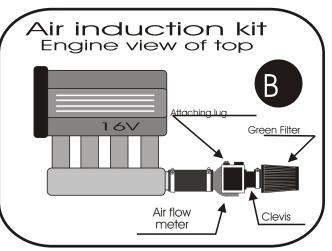

IMPORTANT:

The ruming of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products..

WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes mot arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.

Green Technical dept: TEL: 00.33.3.44.02.64.64