


- Remove the hard hose D (diagram A).
- Remove the original air filter. Keep the air box to chanel fresh air.
- Fix kit to the throttle box (diagram B).
- Connect the negative pressure pipes to the kit holes.

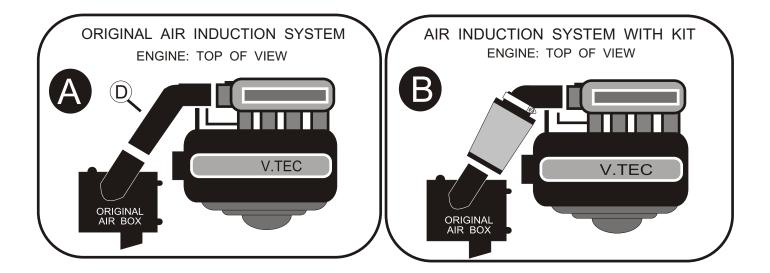

## **IMPORTANT:**

The ruming of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products..

## WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.

Green Technical dept : TEL: 00.33.3.44.02.64.64