



S.A.S  
**Chrono'Sport**  
 122 rue du faubourg Saint Jean  
 ZA de l'AVELON - 60000 BEAUVAIS -  
 FRANCE

03.44.02.64.64

03.44.02.87.10

# KIT ADMISSION DIRECTE

## RENAULT CLIO 1.4LI MONOPOINT

# Part n°: P075

# FITTING INSTRUCTION

1°-Remove the complete air box

- A) To make it, unscrew the two nuts who are on the lid.
- B) Raise the all, and disconnect the pipe of oil vapor recycling.
- C) Remove the all and the air pipe.

2°-Remove the joint of rubber who is on the carburator mono point.

3°-Screw the two threaded bar (a) diagram C, of the kit on the carburator, at the place of the original screw (f).  
 -The threaded bar (a) must be apply **by hand**, from in full lock, then tighten the lock nut (b) diagram C in full lock, and make **¼ round of locking; NO MORE!!**

4°- Joint the Green filter on the carburator, after have lubricate this.

- Lie on the two large washer on the threaded bar and the three lock nut.

**ATTENTION THE NEXT PARAGRAPH IS EXTREMELY IMPORTANT, IT CONDITION THE WATERTIGHT AND THE TIME OF LIFE OF YOUR FILTER.**

5°- Method of techtening of the lock nut




- a) Tighten the nut from the contact of the washer, it's mean at the moment where you can't turn no more the washer with your finger.

- B) At this stage, make a techtening of ¼ of round, NO MORE.**

Now the filter is just tighten to create the watertightness on the carbutor, and not too, in order to no damage.

**AN ADDITIONAL TECHTENING SUPPLÉMENTAIRE WERE POINTLESS**

6°- Joint the small filter of oil vapor recycling, on the blue connector who is between the two original air pipes.

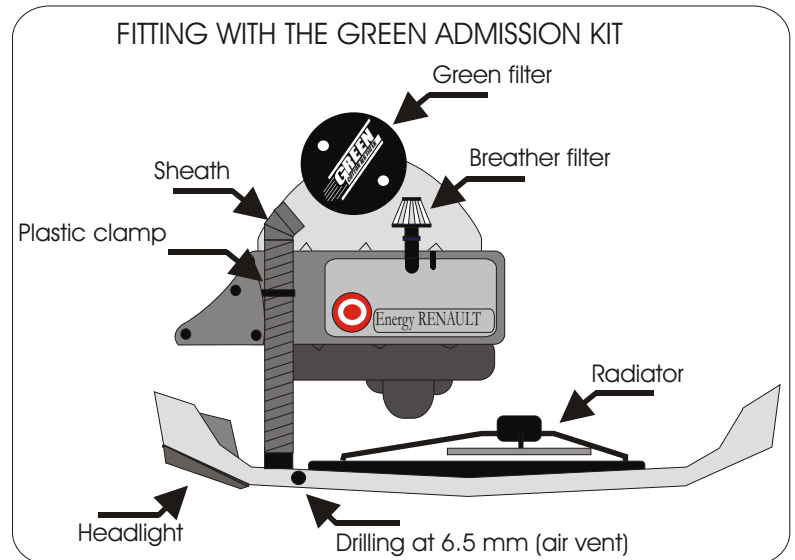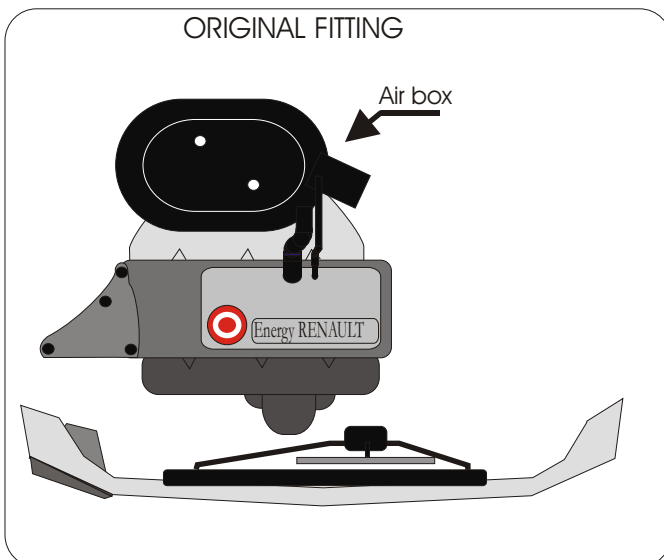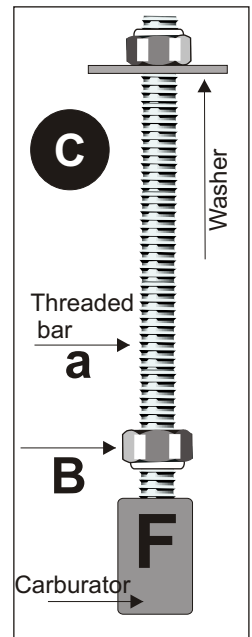

### IMPORTANT:

The running of your engine is linked directly with the maintenance of your air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products.

### WARRANTY:

The air filter guarantees is for defects in materials or workmanship only. Guarantees is void if the air filter is damage by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.

Green Technical Dept: TEL: 00.33.3.44.02.64.64



## Comment utiliser et entretenir votre filtre à air AIR FILTER SERVICE INSTRUCTIONS

Votre filtre à air doit être nettoyé entre 7000 kms et 10000 kms. ou tous les 6 mois.

La périodicité de nettoyage est directement liée à l'environnement dans lequel vous circulez.



### Procédure de nettoyage des filtres

**UTILISER EXCLUSIVEMENT LES PRODUITS D'ENTRETIEN PRÉCONISÉS PAR GREEN**

- Déposer le filtre.
- Souffler le filtre, afin d'évacuer le plus gros des impuretés.  
ATTENTION- maintenir la "soufflette" à une distance d'environ 15cm.
- Imprégner le filtre de nettoyant GREEN.
- Laisser agir le produit environ 15 minutes.
- Vous pouvez frotter le filtre à l'aide d'un pinceau
- Rincer le filtre à l'eau CHAUDE, par l'intérieur puis par l'extérieur
- Pour les filtres fortement encrassés, n'hésitez pas à renouveler l'opération.
- Secouer le filtre pour évacuer l'eau.
- Il est possible de se servir d'air comprimé pour évacuer l'eau.
- Faites sécher le filtre sur un radiateur tiède, ou à l'aide d'un sèche-cheveux.
- Vaporiser l'huile GREEN sur toute la surface du filtre, uniformément mais sans excès



## How to use and maintain your air filter AIR FILTER SERVICE INSTRUCTIONS

Clean your air filter between 7000 km and 10000 km or every 6 months.

Cleaning periodicity is linked directly to the environment in which you drive.



### Procedure for cleaning the GREEN filters

**USE EXCLUSIVELY THE MAINTENANCE PRODUCTS RECOMMENDED BY GREEN**

- Remove the filter
- Blow out the filter to expel the largest impurities  
CAUTION: maintain the blower at a distance of 15 cm or so.
- Impregnate the filter with GREEN cleaner
- Allow the product to act for about 15 minutes
- You can rub the filter with a paint brush
- Rinse the filter with hot water first on the inside then on the outside
- For deeply fouled filters, be sure to repeat the operation
- Shake the filter to evacuate the water
- Compressed air can be used to evacuate the water
- Dry the filter on a tepid radiator or using a hair dryer
- Spray GREEN oil onto the entire surface of the filter, uniformly but not excessively

## NOMENCLATURE

Article	Référence	Q
FILTRE FILTER	P75F	1
FILTRE FILTER	B1.10	1
MANCHON SLEEVE	MA 03	1
VIS SCREW	VTH 6.40	1
ECROU NUT	ECN 06	3
RONDELLE WASHER	RL 620	1
RONDELLE WASHER	RP 06	1
RONDELLE WASHER	RL 630	4
COLLIER PLASTIQUE PLASTIC CLAMP	CP 360	1
GAINÉ ALUMINIUM ALUMINIUM SHEATH	Ø 60/500	1
TIGE FILETE THREADED BAR	Ø 6/850	2
COLLIER CLAMP	16/25	1
ENTRTOISE SPACER	Ø 6/620	2



## Como utilizar y cuidar su filtro para aire AIR FILTER SERVICE INSTRUCTIONS

Su filtro para aire debe ser limpiado entre los 7000 km y los 10.000 km o cada seis meses.

La periodicidad de limpieza es directamente ligada con el medio ambiente en el que circula usted.



### Proceso de limpieza de los filtros

**UTILIZAR EXCLUSIVAMENTE LOS PRODUCTOS DE LIMPIEZA PRECONIZADOS POR GREEN**

- Depositar el filtro.
- Soplar el filtro a fin de despejar el máximo de impurezas.  
CUIDADO: mantener el fuelle a una distancia de unos 15 cm.
- Impregnar el filtro con el producto para la limpieza Green.
- Dejar el producto actuar unos 15 minutos.
- Puede usted frotar el filtro con un pincel.
- Enjuagar el filtro con agua caliente, por el interior y luego por el exterior.
- Para los filtros muy ensuciados, no vacile en repetir la operación.
- Sacudir el filtro para quitar el agua.
- Es posible utilizar aire comprimido para quitar el agua.
- Seque usted el filtro en un radiador tibio o utilice un secador.
- Vaporizar el aceite Green en toda la superficie del filtro uniformemente pero sin exeso.

