



KIT ADMISSION DIRECTE
DIRECT INDUCTION KIT

SUBARU IMPREZA 4
WD TURBO

S.A.S.
Chrono'Sport
122 rue du faubourg Saint Jean
ZA de l'AVELON - 60000 BEAUVAIS -
FRANCE
 00.33.3.44.02.64.64
 00.33.3.44.02.87.10

Part n° :P142

FITTING INSTRUCTION

- 1)- Remove the complete air box then disconnect the air flow meter from the air box.
- 2)- Remove the small pipe B from the larger pipe B (see diagram A).
- 3)- Remove the larger pipe B off the soundproof box then, remove the small pipe A and C
- 4)- Disconnect the soundproof box from the larger pipe A (see diagram A).
- 5)- Put the 70 mm diameter sleeve in the larger pipe A then tighten it.
Put the GREEN pipe on the sleeve (diagram B).
- 6)- Put the 90° bend connector in the small pipe A and the GREEN connector on pipe C (see diagram B).
Then, put the two connectors into the GREEN pipe, the 90° bend in the 7 mm hole and
the GREEN connector in the 13 mm hole (see diagram C).
- 7)- Fix the stainless adaptor on the air flow meter with the screws provided
(diagram B).
- 8)- Put the air flow meter on the GREEN pipe.
- 9)- It is necessary to make a small hole on the base of the filter (see diagram C)
CAUTION : do not damage the Green filter. This is for the small pipe B.
- 10)- Fit together the GREEN filter to the air flow meter then, fit together the small pipe B into the hole.
- 11)- Fix the attaching bracket to the 'A.B.S support then fix the other end of the bracket to the GREEN filter.
Before tightening, adjust the kit so there is no contact with the GREEN filter,
to avoid its deterioration.

IMPORTANT:

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products..

WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.



Comment utiliser et entretenir votre filtre à air AIR FILTER SERVICE INSTRUCTIONS

Votre filtre à air doit être nettoyé entre 7000 kms et 10000 kms. ou tous les 6 mois.

La périodicité de nettoyage est directement liée à l'environnement dans lequel vous circulez.

Procédure de nettoyage des filtres

UTILISER EXCLUSIVEMENT LES PRODUITS D'ENTRETIEN PRÉCONISÉS PAR GREEN

- Déposer le filtre.
- Souffler le filtre, afin d'évacuer le plus gros des impuretés.
ATTENTION- maintenir la "soufflette" à une distance d'environ 15cm.
- Imprégner le filtre de nettoyant GREEN.
- Laisser agir le produit environ 15 minutes.
- Vous pouvez frotter le filtre à l'aide d'un pinceau
- Rincer le filtre à l'eau CHAUDE, par l'intérieur puis par l'extérieur
- Pour les filtres fortement encrassés, n'hésitez pas à renouveler l'opération.
- Secouer le filtre pour évacuer l'eau.
- Il est possible de se servir d'air comprimé pour évacuer l'eau.
- Faites sécher le filtre sur un radiateur tiède, ou à l'aide d'un sèche-cheveux.
- Vaporiser l'huile GREEN sur toute la surface du filtre, uniformément mais sans excès



How to use and maintain your air filter AIR FILTER SERVICE INSTRUCTIONS

It is essential to oil the GREEN filter using the supplied quantity of oil. Clean your air filter between 7000 km and 10000 km or every 6 months.

Cleaning periodicity is linked directly to the environment in which you drive.

Procedure for cleaning the GREEN filters

USE EXCLUSIVELY THE MAINTENANCE PRODUCTS RECOMMENDED BY GREEN

- Remove the filter
- Blow out the filter to expel the largest impurities
CAUTION: maintain the blower at a distance of 15 cm or so.
- Impregnate the filter with GREEN cleaner
- Allow the product to act for about 15 minutes
- You can rub the filter with a paint brush
- Rinse the filter with hot water first on the inside then on the outside
- For deeply fouled filters, be sure to repeat the operation
- Shake the filter to evacuate the water
- Compressed air can be used to evacuate the water
- Dry the filter on a tepid radiator or using a hair dryer
- Spray GREEN oil onto the entire surface of the filter, uniformly but not excessively

NOMENCLATURE

Article	Référence	Q
FILTRE FILTER	K3.85V	1
CANALISATION FLEXIBLE PIPE	DP8A12	1
MANCHON SLEEVE	M5D70	1
RACCORD CONNECTOR	CD 12	1
RACCORD CONNECTOR	JRD 16.12	1
RACCORD CONNECTOR	CD 8	1
CHAPE ADAPTOR	BR 04B	1
PATTE BRACKET	FIX 25	1
CANALISATION FLEXIBLE PIPE	Ø10L120	1
VIS SCREW	V615BTR	4
RONDELLE WASHER	RP 06	8
ECROU NUT	ECN 06	4
ECROU NUT	ECN 08	1
RONDELLE WASHER	RP 08	2
OBTURATEUR COVER	1179	1
COLLIER CLAMP	70/90	2
COLLIER CLAMP	80/100	1



Como utilizar y cuidar su filtro para aire AIR FILTER SERVICE INSTRUCTIONS

Su filtro para aire debe ser limpiado entre los 7000 km y los 10.000 km o cada seis meses.

La periodicidad de limpieza es directamente ligada con el medio ambiente en el que circula usted.

Proceso de limpieza de los filtros

UTILIZAR EXCLUSIVAMENTE LOS PRODUCTOS DE LIMPIEZA PRECONIZADOS POR GREEN

- Depositar el filtro.
- Soplar el filtro a fin de despejar el máximo de impurezas.
CUIDADO: mantener el fuelle a una distancia de unos 15 cm.
- Impregnar el filtro con el producto para la limpieza Green.
- Dejar el producto actuar unos 15 minutos.
- Puede usted frotar el filtro con un pincel.
- Enjuagar el filtro con agua caliente, por el interior y luego por el exterior.
- Para los filtros muy ensuciados, no vacile en repetir la operación.
- Sacudir el filtro para quitar el agua.
- Es posible utilizar aire comprimido para quitar el agua.
- Seque usted el filtro en un radiador tibio o utilice un secador.
- Vaporizar el aceite Green en toda la superficie del filtro uniformemente pero sin exeso.

