

1)- Remove the complete air box


2/ Fix the steel sleeve to the pipe A.

3)- Fix the Green filter to the steel sleeve then tighten with the clamps provided in the kit.

4)- Fix pipe A and the GREEN filter with the plastic clamp.

Use the four tubes of the inlet manifold as anchorage points.

5)- Bend pipe B onto the GREEN filter.

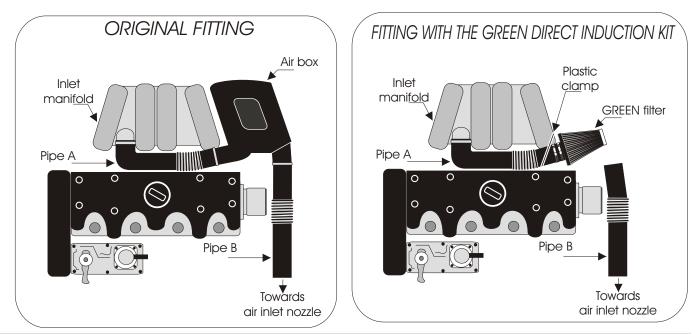

IMPORTANT:

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products.

WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.