



Part n°:P190


TIIIING INSINGCIION


Remove thecomplete air box (see diagram A)

Fix the pipe with green filter to throttle box.(see diagram B)

Connect the oil vapor recycling pipe to the connector on the green filter.

Position the filter in order that it does not touch a mechanical part.

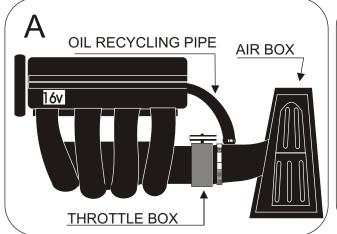

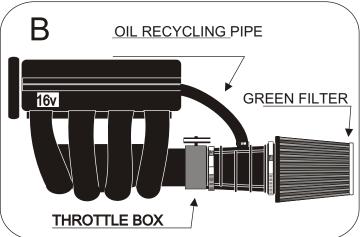

## **IMPORTANT:**

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products.

## **WARRANTY:**

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.

Green Technical dept: TEL: 00.33.3.44.02.64.64