


Remove the complete air box and the pipes A.B.C (see diagram A).

Fix the small green filter to the throttle box.(see diagram B)

Adjust the filter in order that it does not touch a mechanical part

Fix the oil vapor pipe to the connector of the green filter.(see diagram B)

Fix the aluminium sleeve to the fresh air inlet nozzle then position it towards the green filter.(see diagram B) Fix the aluminium sleeve with the plastic clamp provided.(see diagram B)

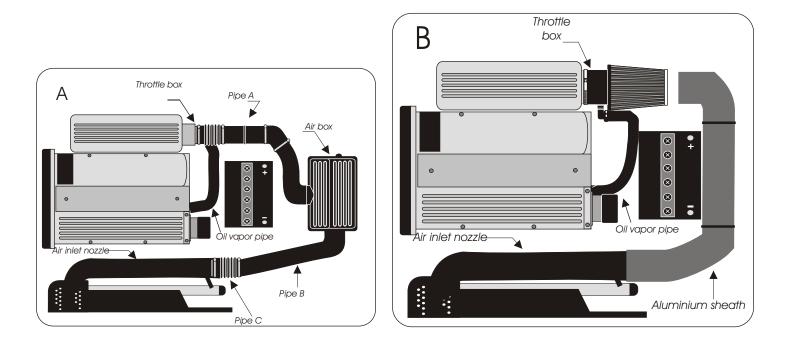

IMPORTANT:

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products.

WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.