


Remove the upper part of the air box.

Fix the green filter with the sleeve to the pipe A (see diagram B).

Fix the bracket provided in the kit to the green filter.(see diagram B)

Adjust the bracket in order that the filter does not touch a mechanical part then drill the upper cross member with a 8 mm hole.

Fix the bracket with the clamp provided (See diagram B)

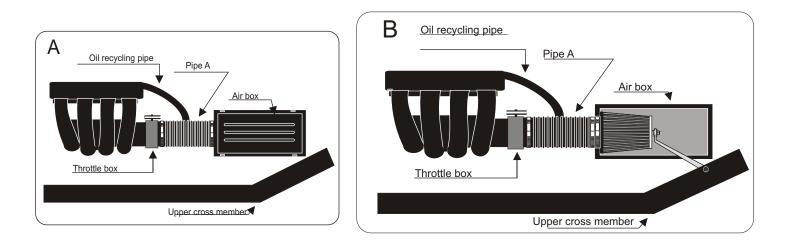

IMPORTANT:

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products.

WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.