


Remove the air box and the pipe A.(see diagram A)

Fix the green filter with the pipe B to the turbo entry pipe.(see diagram B)

Position the filter towards the low then adjust it in order that it does not touch a mechanical part. Fix the oil vapor pipe to the pipe B (see diagram B) with the connector provided in the kit.

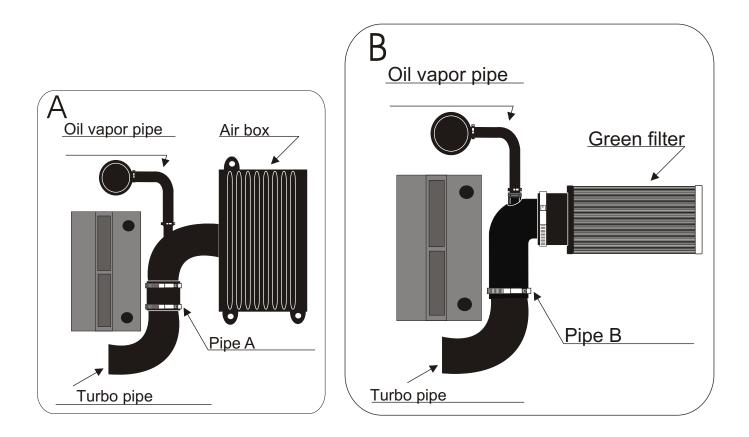

## **IMPORTANT:**

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products.

## WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.