



Remove the air box and the oil vapor pipe.(see diagram A)

Fix the green filter to the throttle box (see diagram C)

Fix the negative pressure pipe (see diagram B) to the connector of the kit (see diagram C).

Fix the small green filter at the place of the oil vapor pipe. (See diagram B)

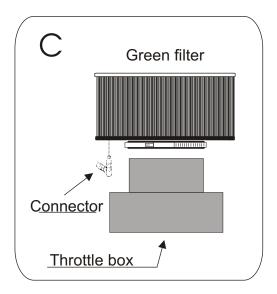

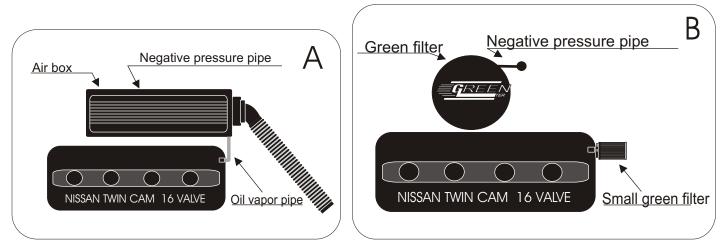

IMPORTANT:

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products.

WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.