

Remove the original air filter and position the Green filter.


Remove the air inlet nozzle from the air box.(see diagram A)

Remove the radiator grille then fix the adaptor to the attaching bracket of the horn.

Position the plastic sleeve to the end of the air box.(see diagram B)

Fix the air box to the adaptor with the aluminium sheath provided.(see diagram B)

Reposition the radiator grille.

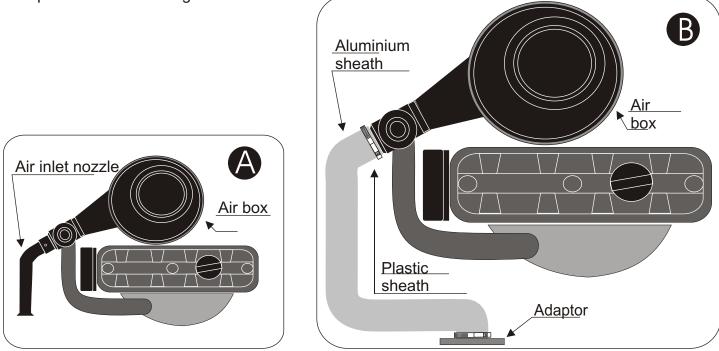

## **IMPORTANT:**

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products.

## WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.