



Part n°:P285

fitting instruction


Remove the pipe A.(see diagram A)


Remove the protecting bracket of the gasoil pipe. (See diagram A)

Fix the filter to the inlet manifold then adjust it so that it does not touch a mechanical part (see diagram B)

CAUTION

Fix the gasoil pipe with the plastic clamp provided so that it does not touch the filter.

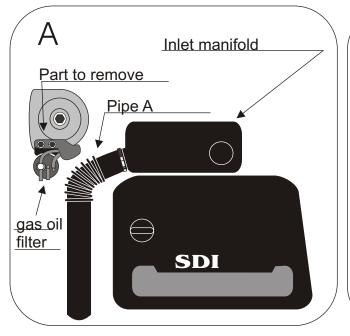

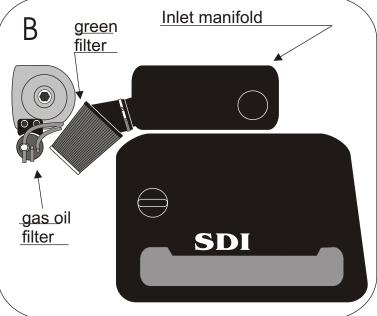

IMPORTANT:

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products.

WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.

Green Technical dept: TEL: 00.33.3.44.02.64.64