

Remove the complete air box, the soundproof box, the pipes A and B. (See diagram A) Disconnect the air temperature probe of the pipe A (see diagram A) then fix it onto the pipe of the kit .(hole of diameter 11 mm)

Disconnect the air flow meter from the air box.

Fix the pipe of the kit onto the inlet manifold.(see diagram B)


Fix the air flow meter onto the pipe of the kit.(see diagram B)

Fix the green filter onto the air flow meter.(see diagram B)

Fix the oil vapor recycling pipe onto the connector.(see diagram B)

Connect the air temperature probe.

Adjust the filter so that it does not touch a mechanical part.

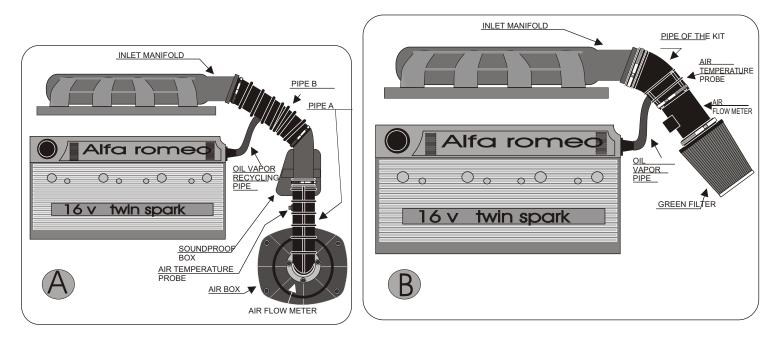

IMPORTANT:

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products.

WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.