

Remove the complete air box.

Disconnect the air flow meter from the air box. (see diagram A)


Fix the green filter onto the air flow meter. (see diagram B)

Adjust the filter with the attaching bracket provided then drill two holes of diameter 4 onto the support panel of the left wing. (see diagram B)

Fix the bracket with the panel screws provided.(see diagram B)

Connect the aluminium sheath to the air fresh pipe with the pipe provided in the kit then adjust it towards the filter.(see diagram B)

Adjust the filter so that it does not touch a mechanical part.

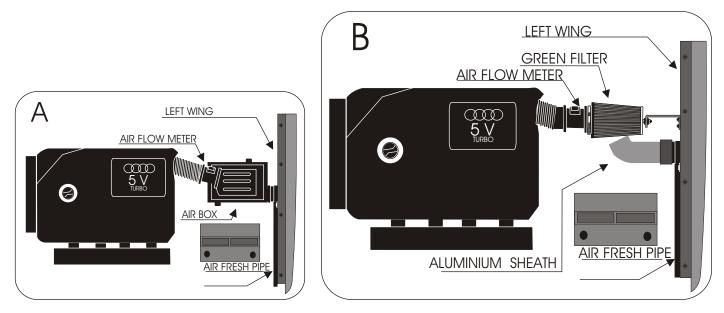

IMPORTANT:

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products.

WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.