

Remove the air box support.

Disconnect the air flow meter from the air box.

Fix the green filter onto the air flow meter. (See diagram B)


Remove the air box support.(see diagram A)

Fix the filter with the bracket provided onto the screw of the air box support.(see diagram B)

Fix the negative pressure pipe onto the base of the filter with the connector provided.(see diagram B)

Fix the pipe of the kit onto the air pipe.(see diagram B)

Adjust the filter in order that it does not touch a mechanical part.

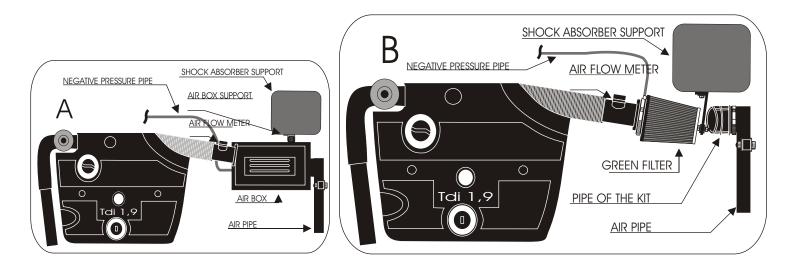

IMPORTANT:

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products.

WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.