

Remove the complete air box. (See diagram A)

Disconnect the air flow meter from the air box.(see diagram A)


Fix the GREEN filter onto the air flow meter. (See diagram B)

Fix the filter with the attaching bracket provided in the kit then drill the cross member with a hole of diameter O4. (See diagram B)

Fix the attaching bracket with the panel screw provided.

Adjust the aluminiumsheath in order to have fresh air into the filter.(see diagram B)

Adjust the filter in order to have fresh air into the filter.

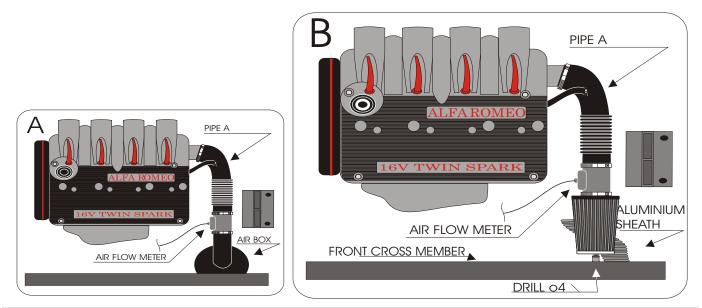

IMPORTANT:

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products.

WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.