

Remove the complete air box and the pipe B.(see diagram C)

Disconnect the air flow meter from the air temperature probe of the pipe B.(see diagram A)

Fix the pipe of the kit onto the air flow meter.(see diagram B)


Fix the GREEN filter onto the pipe of the kit with the sleeve provided.(see diagram B)


Adjust the filter with the attaching bracket then drill a hole of 08.5 into the wheel arch.


Fix the filter with the screw provided. Fix the air temperature probe onto the pipe of the kit.(see diagram B)

Adjust the aluminium pipe onto the air inlet nozzle in order to have fresh air into the filter.(see diagram B)

Adjust the filter so that it does not touch the filter.

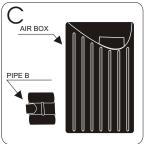

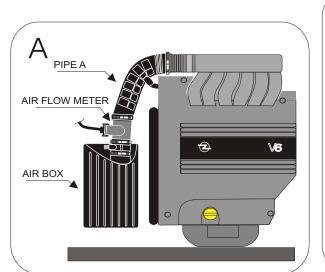

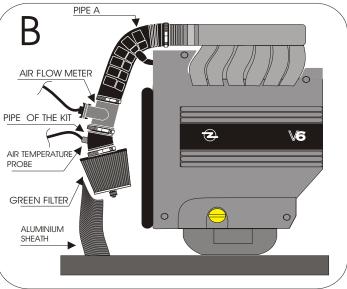

## **IMPORTANT:**

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products.

## WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.