




KIT ADMISSION DIRECTE DIRECT INTAKE KIT

PEUGEOT 306 TURBO D (with A.B.S)

S.A.S.
Chrono'Sport
122 rue du faubourg Saint Jean
ZA de l'AVELON - 60000 BEAUVAIS -
FRANCE


 03.44.02.64.64

 03.44.02.87.10

Part n°: P92

FITTING INSTRUCTION

- 1)- Remove the air filter housing and the flexible pipe B.
- 2)-Fit the aluminium sleeve to flexible pipe A.
- 3)-Under the car, fit together and tighten the GREEN filter on the aluminium sleeve.
- 4)-Under the car, fix the flexible pipe A to the water flexible pipe of the radiator with the plastic clamp provided.

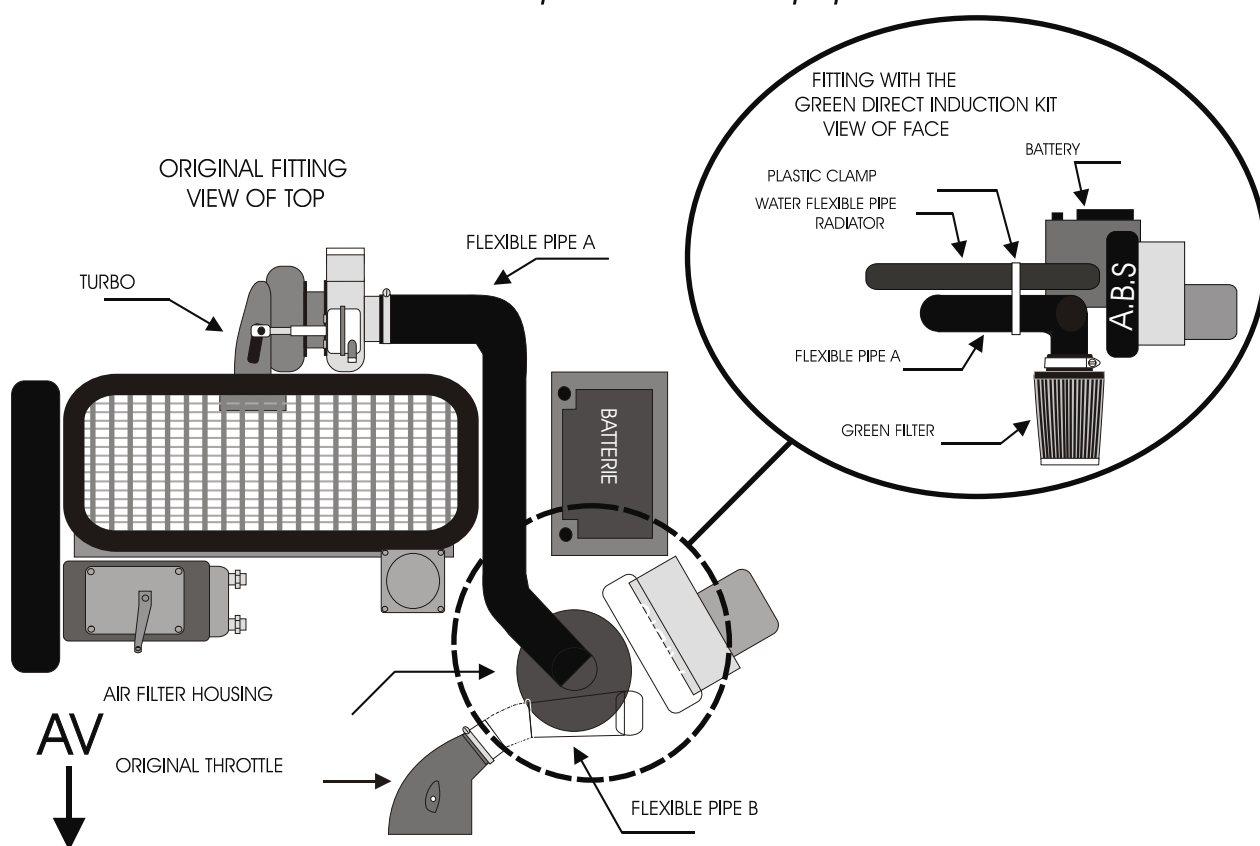

IMPORTANT:

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products..

WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.

Green Technical dept : TEL: 00.33.3.44.02.64.64